

### Tools required:

1. Hand Saw (if sizing is required)
2. level
3. Screwdriver/drill
4. (4) 8-12 x 1" screws with matching anchors
5. 1/4" Drill bit
6. Caulking gun
7. 1 tube of Premium polyurethane construction adhesive

### **READ INSTRUCTIONS THOROUGHLY PRIOR TO ATTEMPTING INSTALLATION**

#### Step 1: Lay-out

- (a) Mark a vertical centre line on wall (fig.1-1).
- (b) Measure and mark lines for legs using a level as a straight edge (fig.1-1) ensuring that you select the correct (A) measurement listed in the legend.

Our mantels are designed to adjust to large variety of fireplace sizes by sliding the components over the surround material. However it is possible to cut the leg base to allow further height adjustment. If filling is required due to uneven walls, we recommend DAP "ALEX PLUS" (ALMOND) as an appropriate colored caulk.

LEGEND				
NAME	MANTEL #	A	B	C
ABERDEEN	4113TC	35"	17"	15 1/4"
ELGIN	4115TC	35"	17"	15 1/4"
EDINBURGH	4117TC	35"	17"	15 1/4"
ASPEN	4151TC	31 1/2"	16 1/4"	10 5/8"
TAHOE	4152TC	31 1/2"	16 1/4"	10 5/8"
VAIL	4153TC	31 1/2"	16 1/4"	10 5/8"
DIVINE	4137TC	VARIABLE	17"	6 5/8"
GRAND	4138TC	VARIABLE	17"	6 5/8"
RAPTURE	4139TC	VARIABLE	16"	3 5/8"
SHELF	4141TC	NO LEGS	16"	NO LEGS

#### Step 2: Installation

### **DRY FIT RECOMMENDED FOR BELOW STEPS PRIOR TO APPLYING ADHESIVE**

- (a) Place the legs in position, select appropriate hole in attached steel strapping, drill and insert anchors into wall (fig. 2-1). Apply adhesive on the bottom of the legs (fig.2-3), then fasten legs into place with a screw.
- (b) Using the appropriate B and C measurements, mark, drill and insert anchors in wall, then fasten hangers securely to the wall (fig.2-2).
- (c) Apply adhesive to the top of the legs and on the wall just above the hanger brackets (keeping below the actual shelf line) (fig.2-4)
- (d) Position top ensuring that the installation tabs are secured behind the hangers and correctly positioned on legs (fig.2-5)

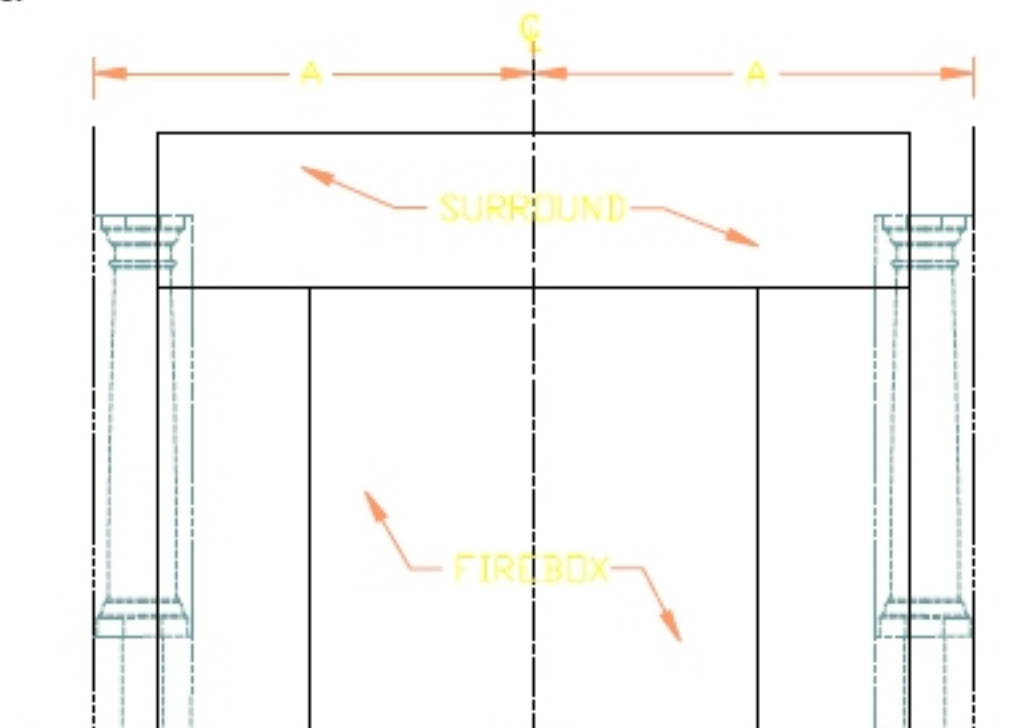


Fig. 1-1